


PURE
CYCLING


FITTING KIT GP0277-01 SPEEDMAX CFR/SLX

IMPORTANT!
READ THESE INSTRUCTIONS CAREFULLY BEFORE FIRST
USE AND KEEP THEM FOR FUTURE REFERENCE.


CANYON

1 FITTING KIT - CONTENT

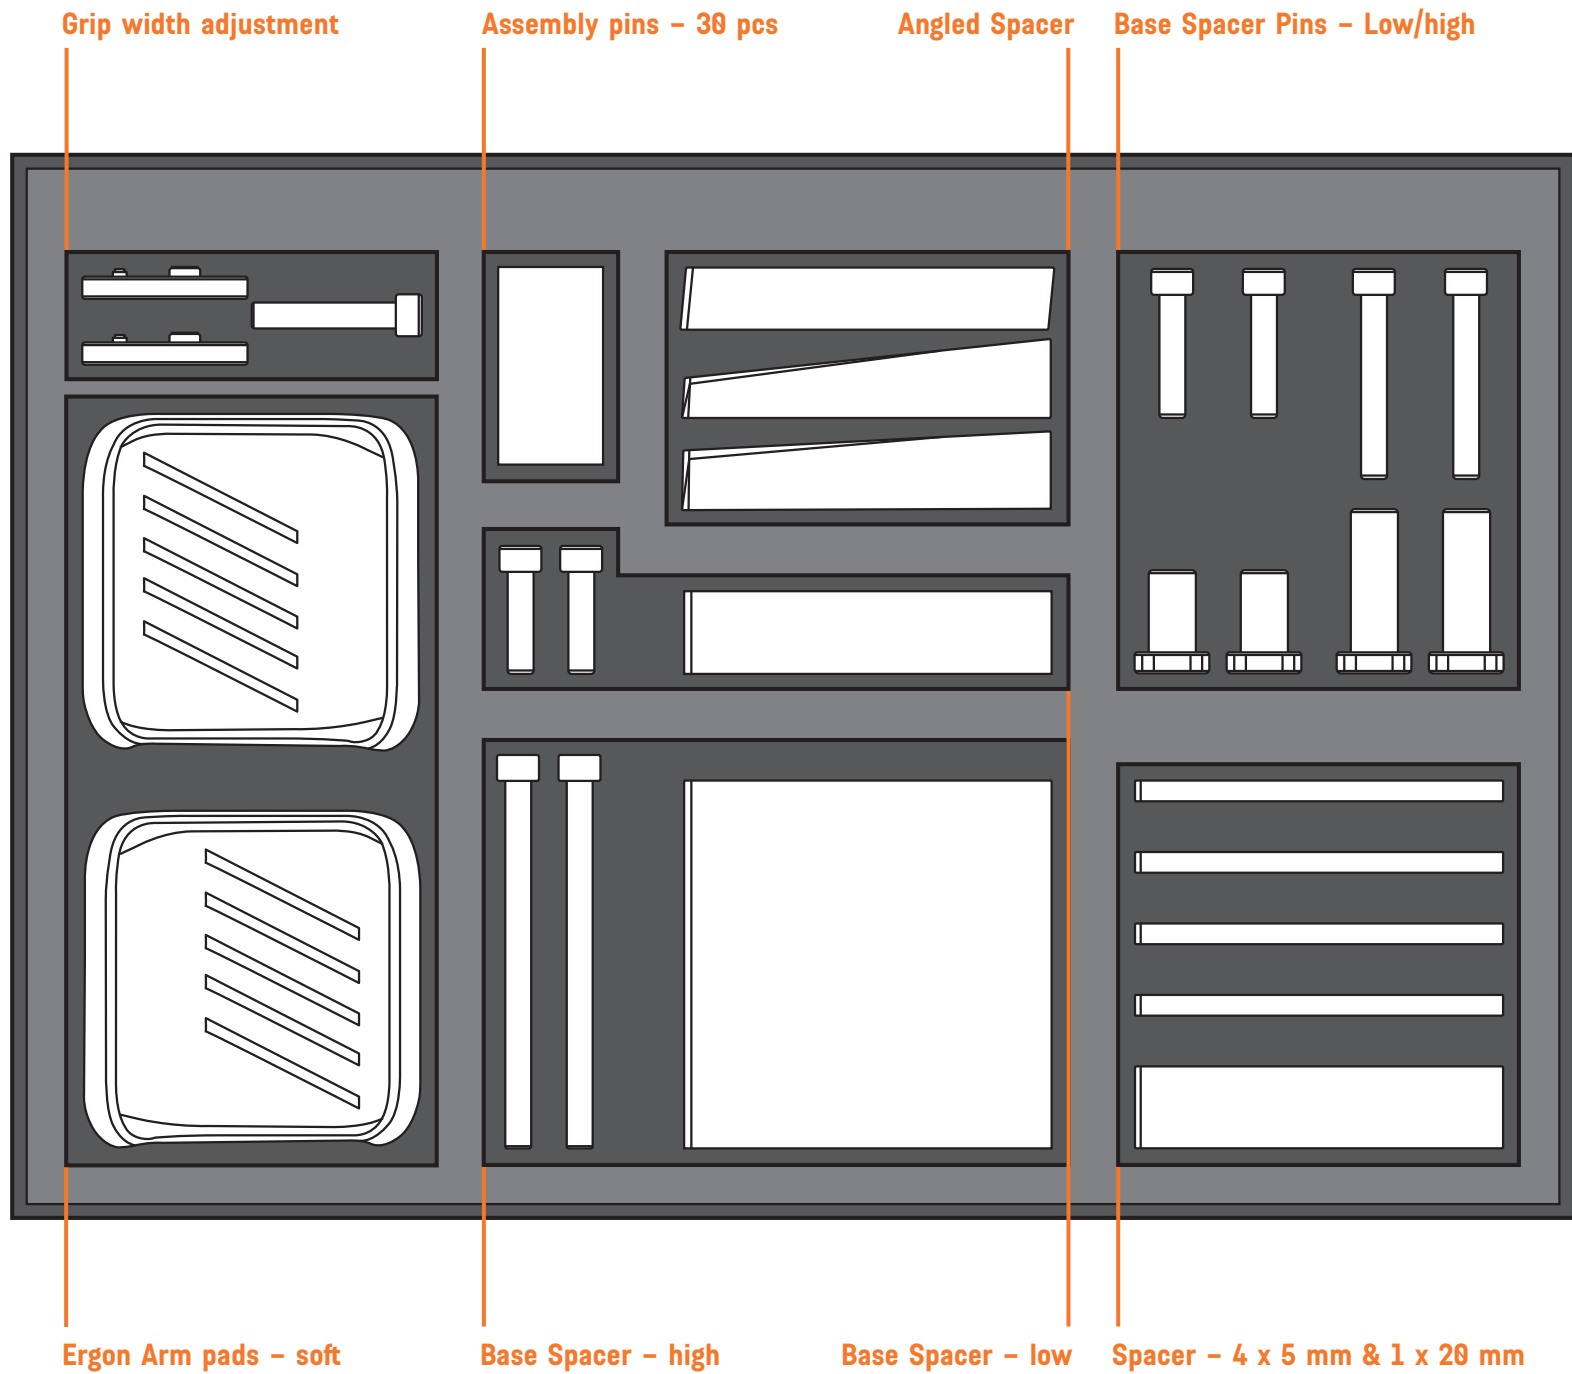


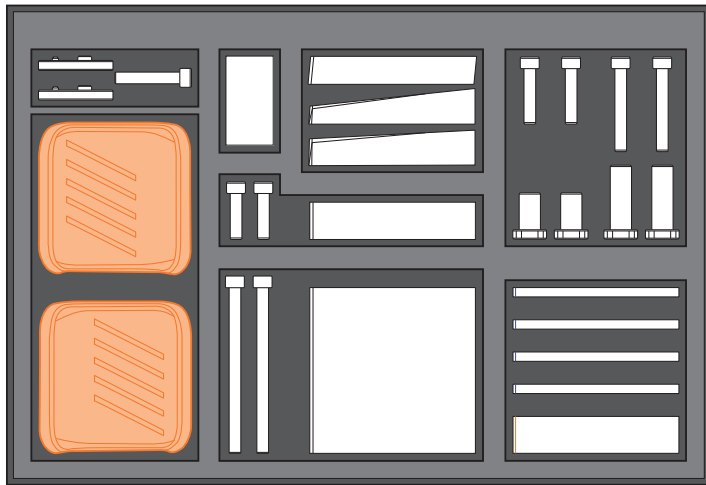

↪ Ergon Arm pads – soft

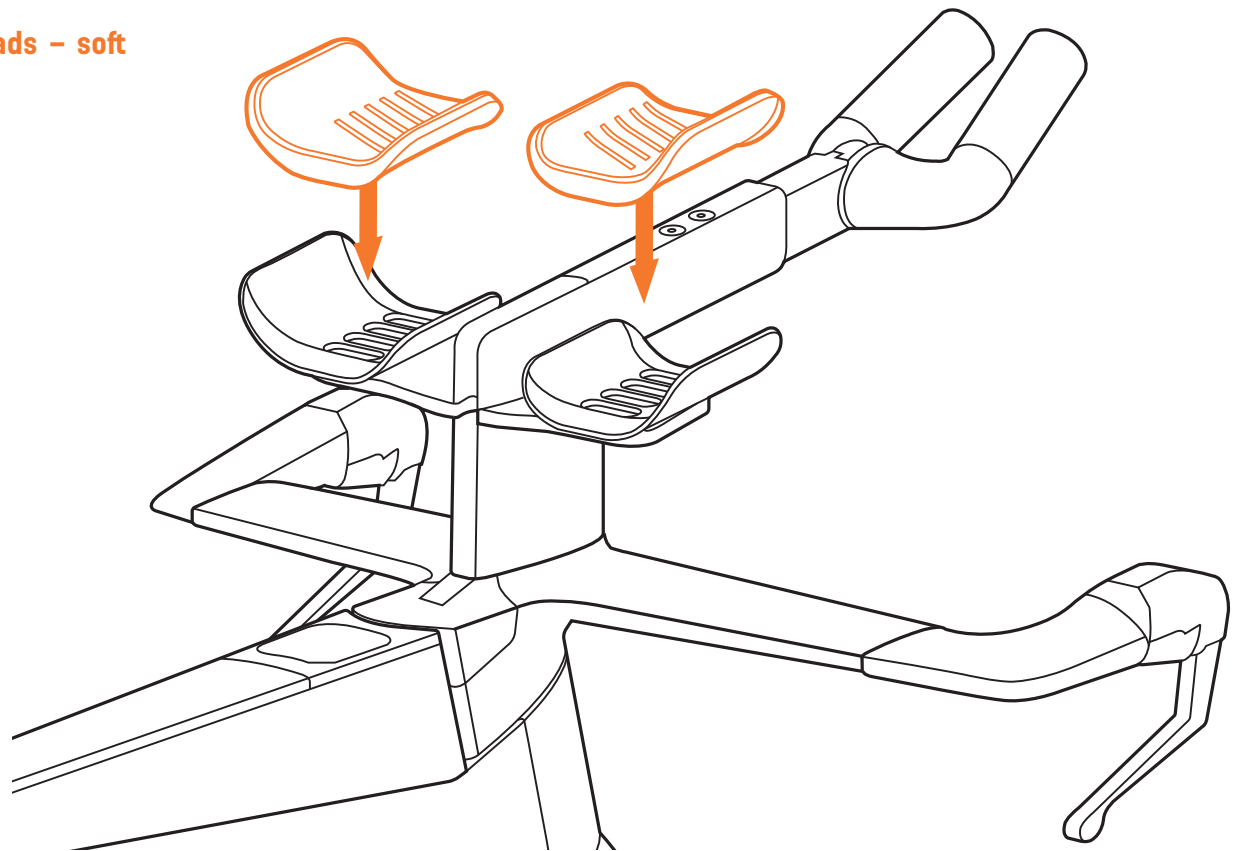


3 MEDIUM POSITION (DELIVERY CONDITION)

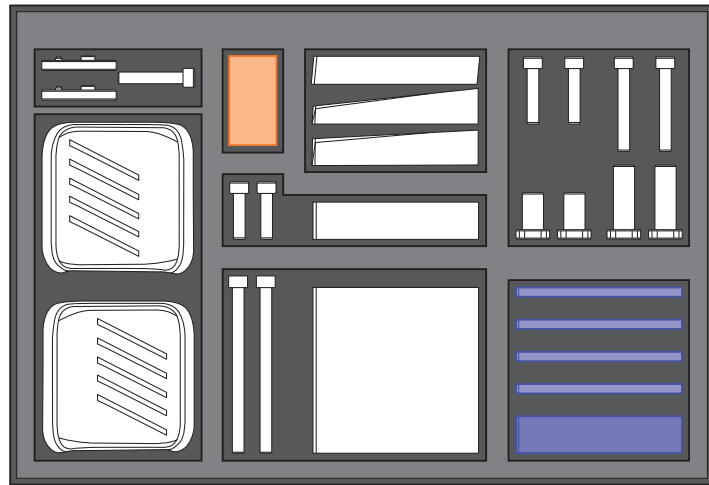




min Spacer 0 mm
max Spacer 40 mm



1. Assembly pins – 10 pcs
2. Spacer – 4 x 5 mm & 1 x 20 mm


SMALL BOX INCLUDED

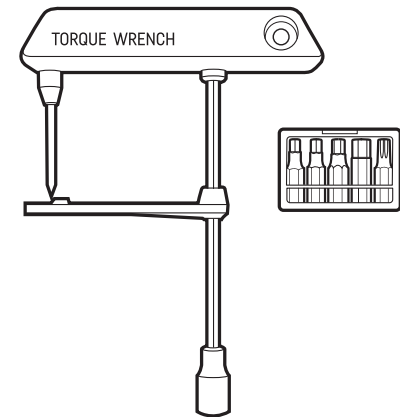

DELIVERY CONDITION

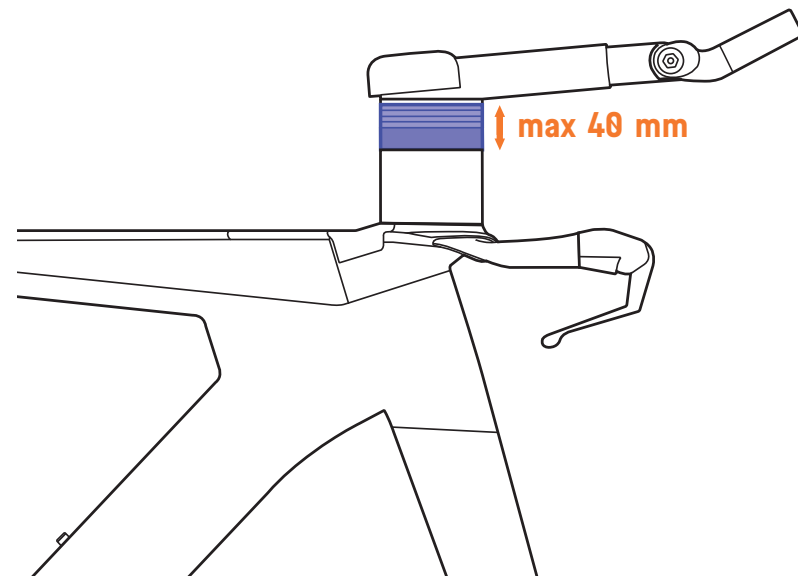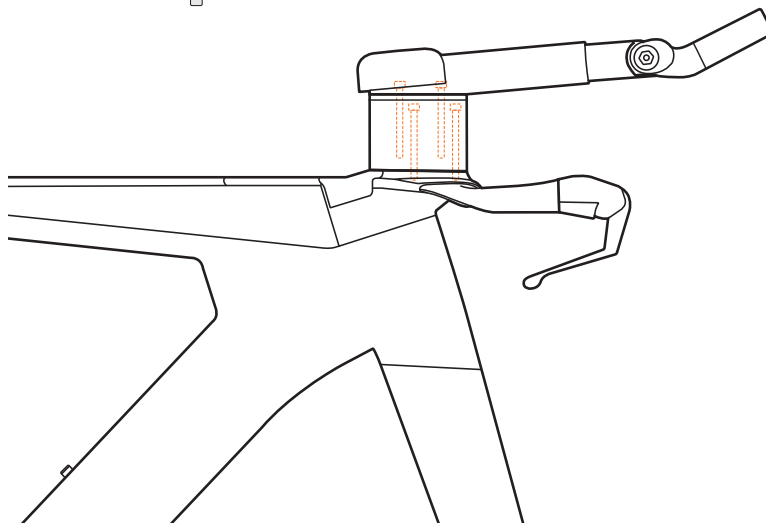


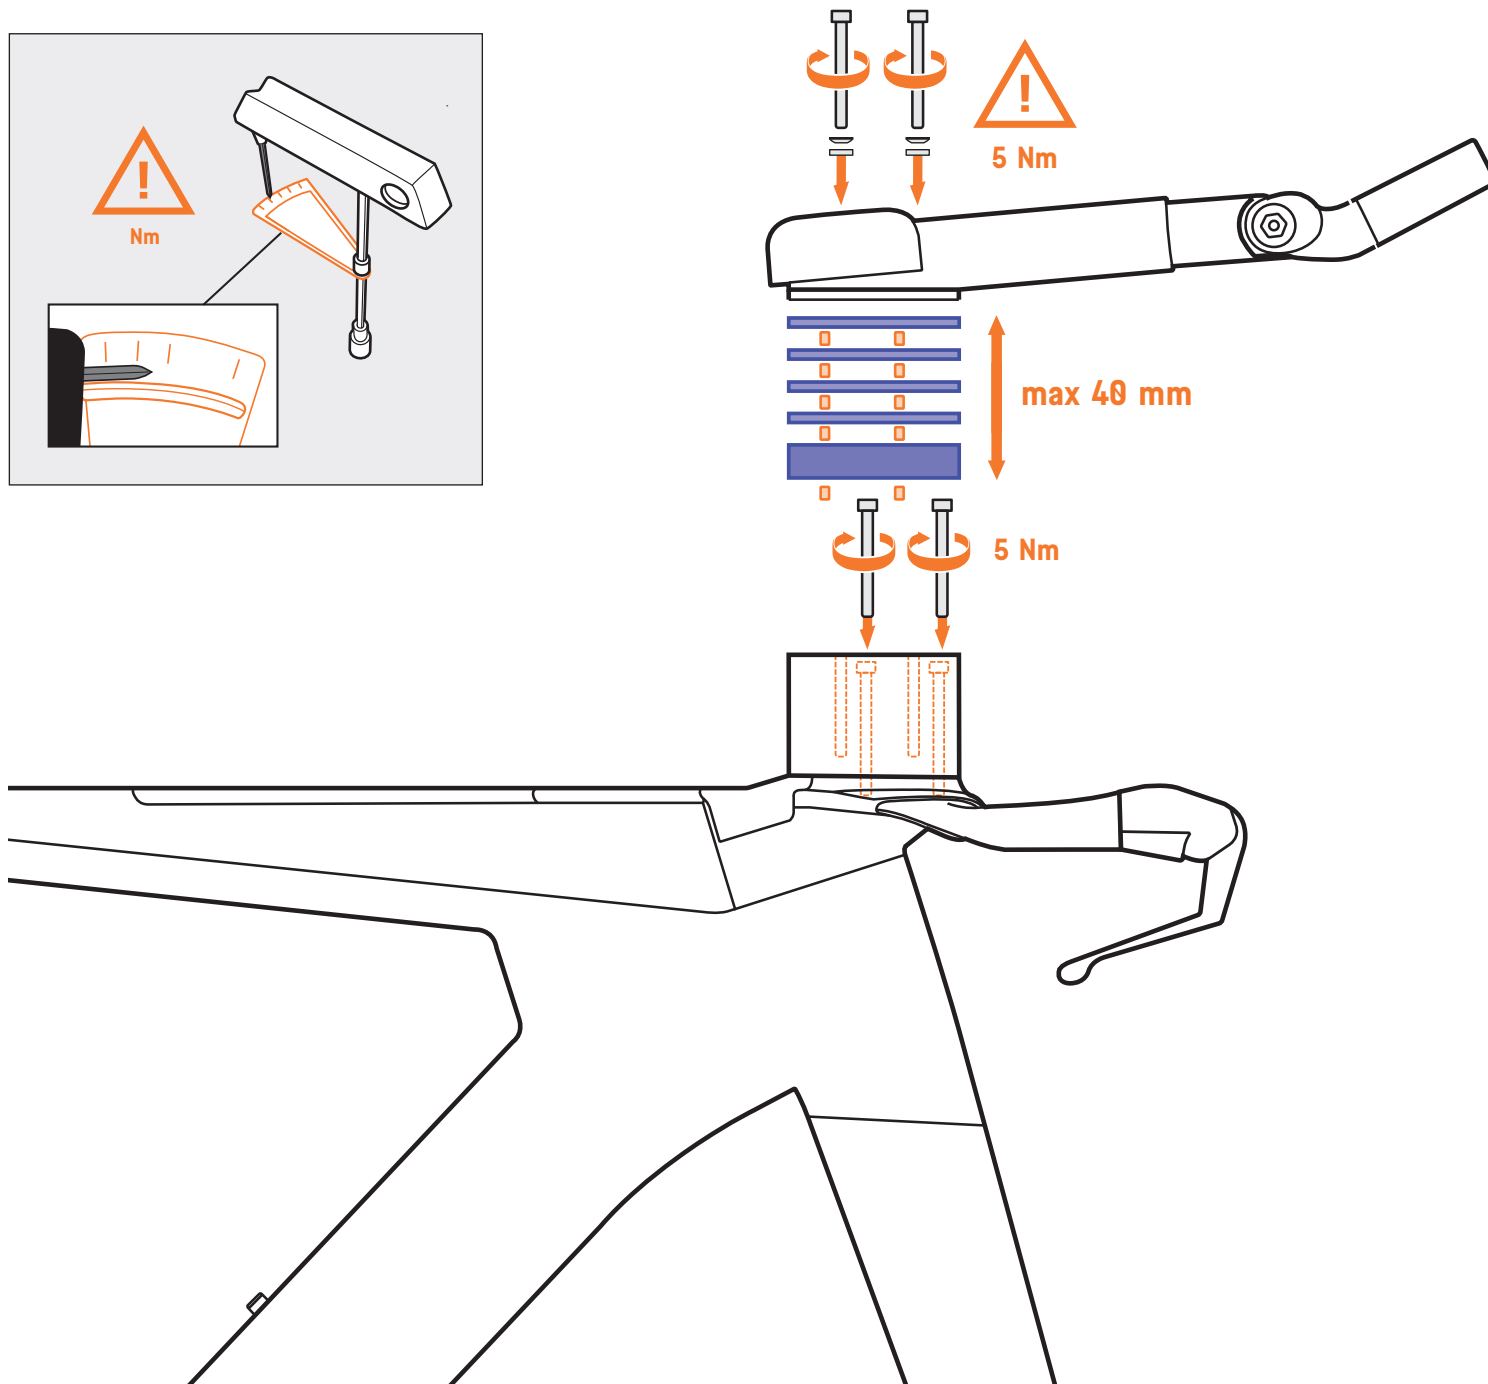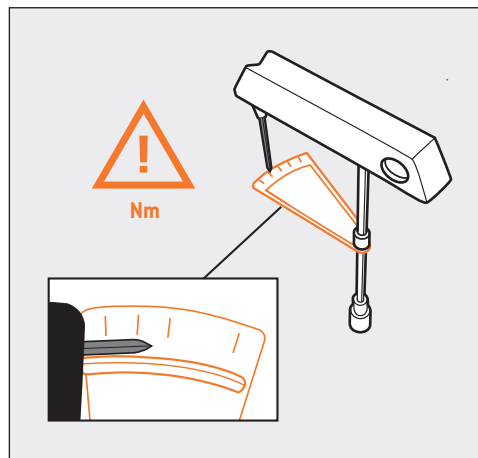


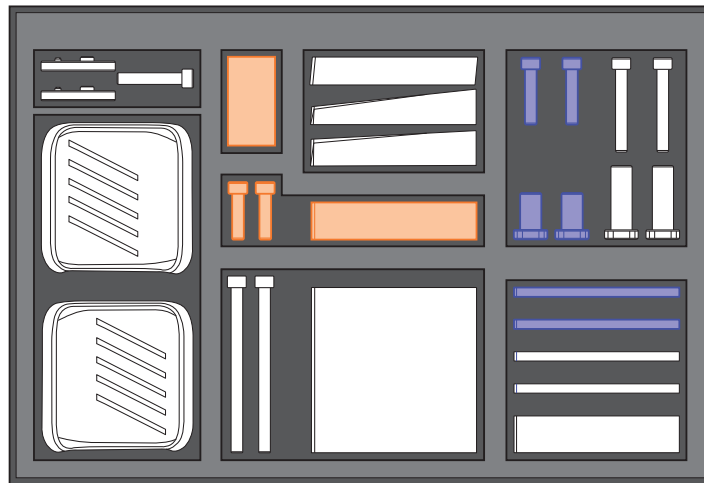

min Spacer 0 mm
max Spacer 10 mm


1. Assembly pins – 6 pcs
2. Base Spacer – low
3. Base Spacer Pins – low
2. Spacer – 2 x 5 mm

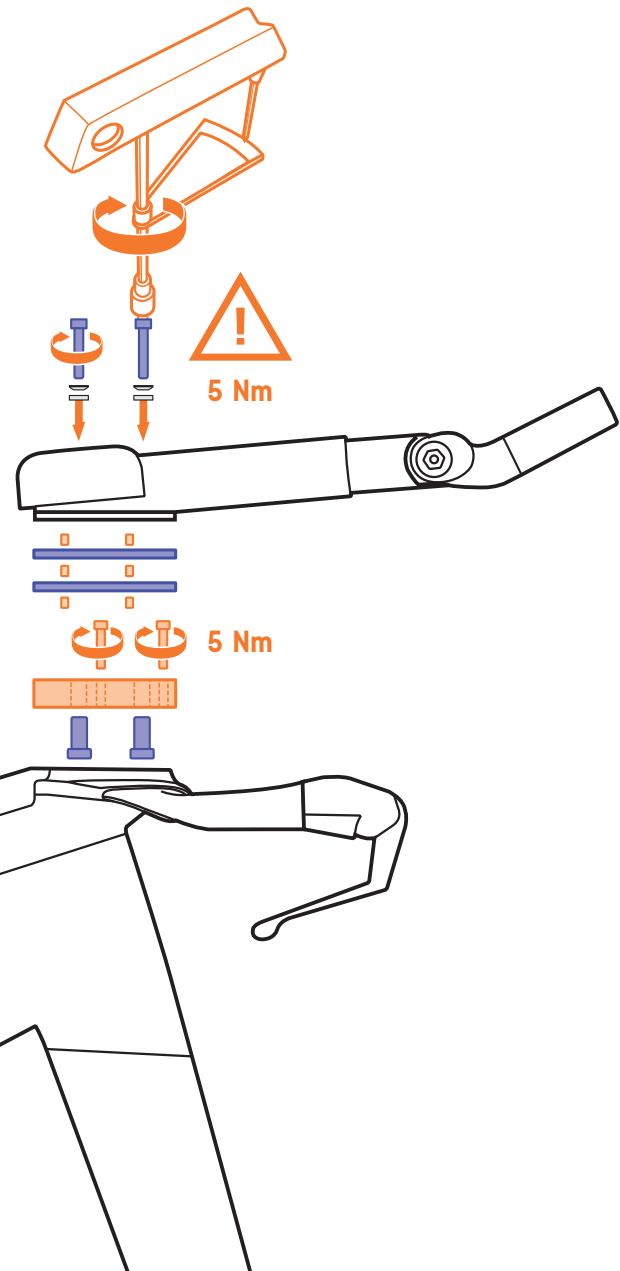


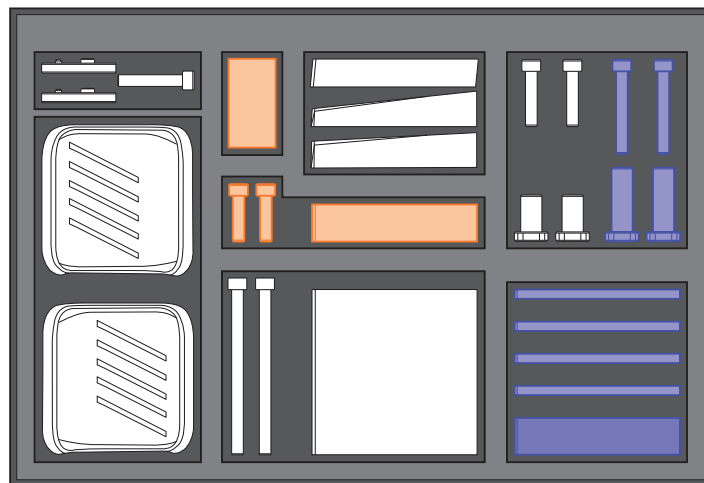

min Spacer 15 mm
max Spacer 40 mm

- 1. Assembly pins - 10 pcs
- 2. Base Spacer - low
- 3. Base Spacer Pins - high
- 4 Spacer - 4 x 5 mm & 1 x 20 mm

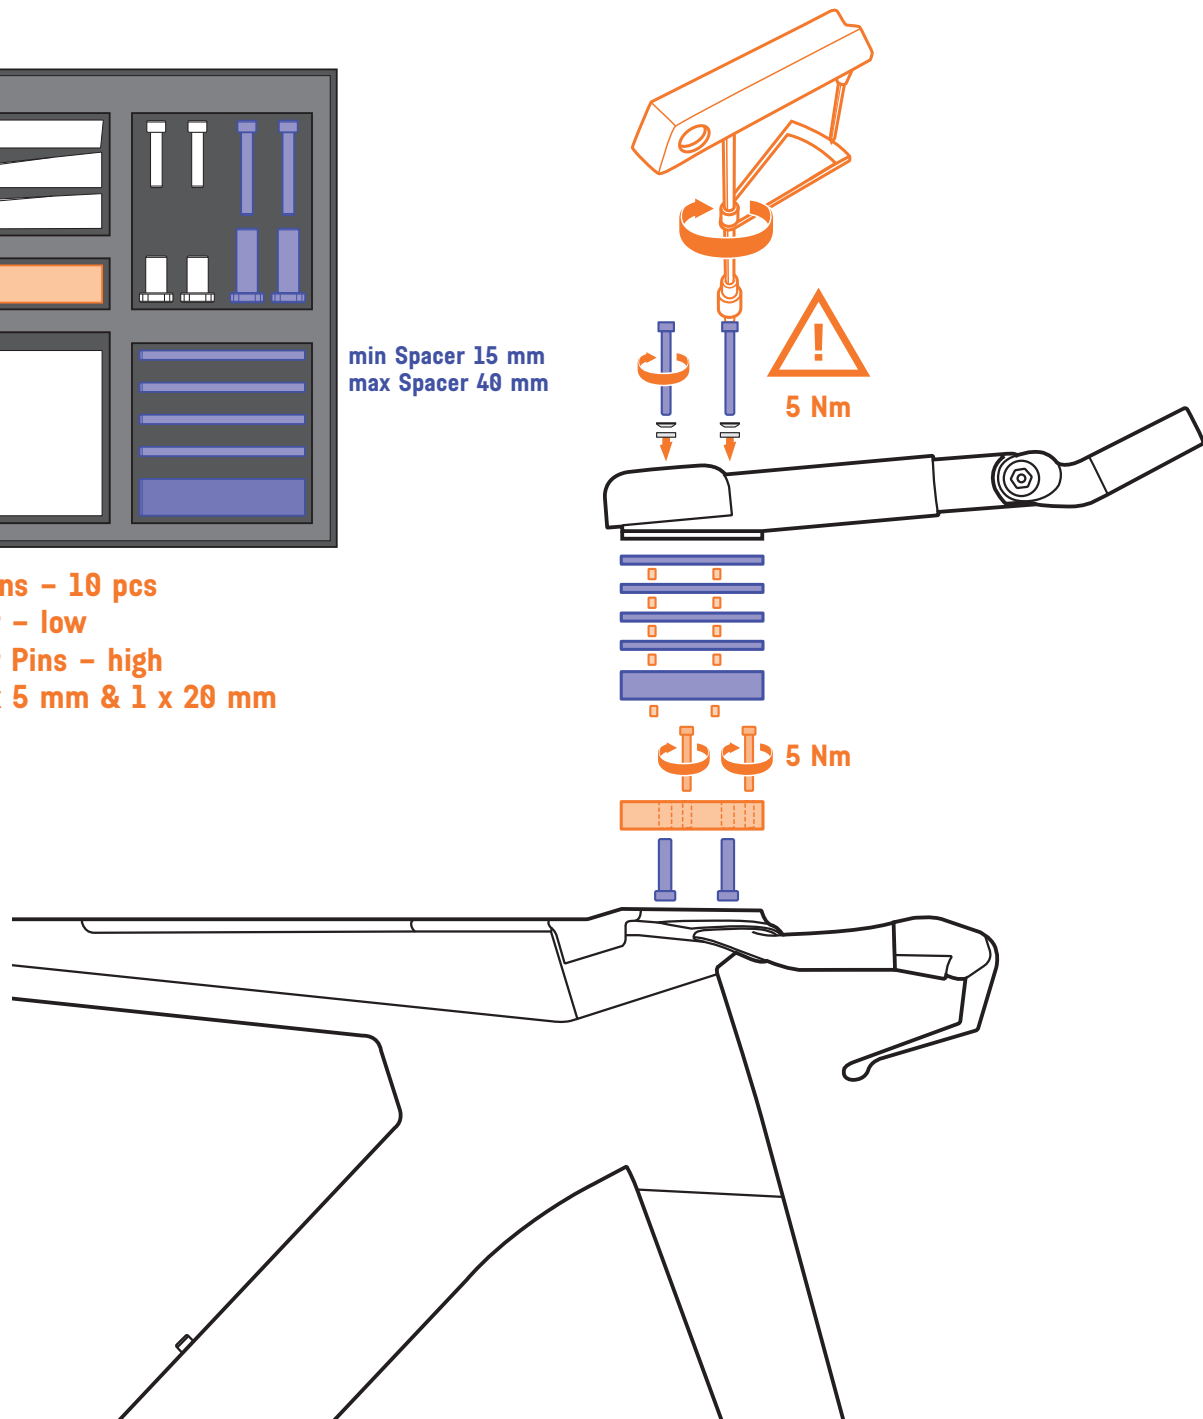

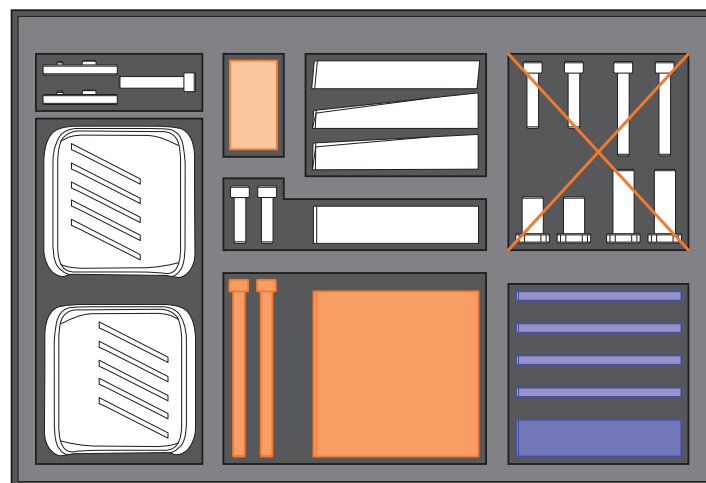


min Spacer 0 mm
max Spacer 40 mm


- 
1. Assembly pins – 10 pcs
 2. Spacer – 4 x 5 mm & 1 x 20 mm
 3. Base Spacer – high

DELIVERY CONDITION  **2x**



2x


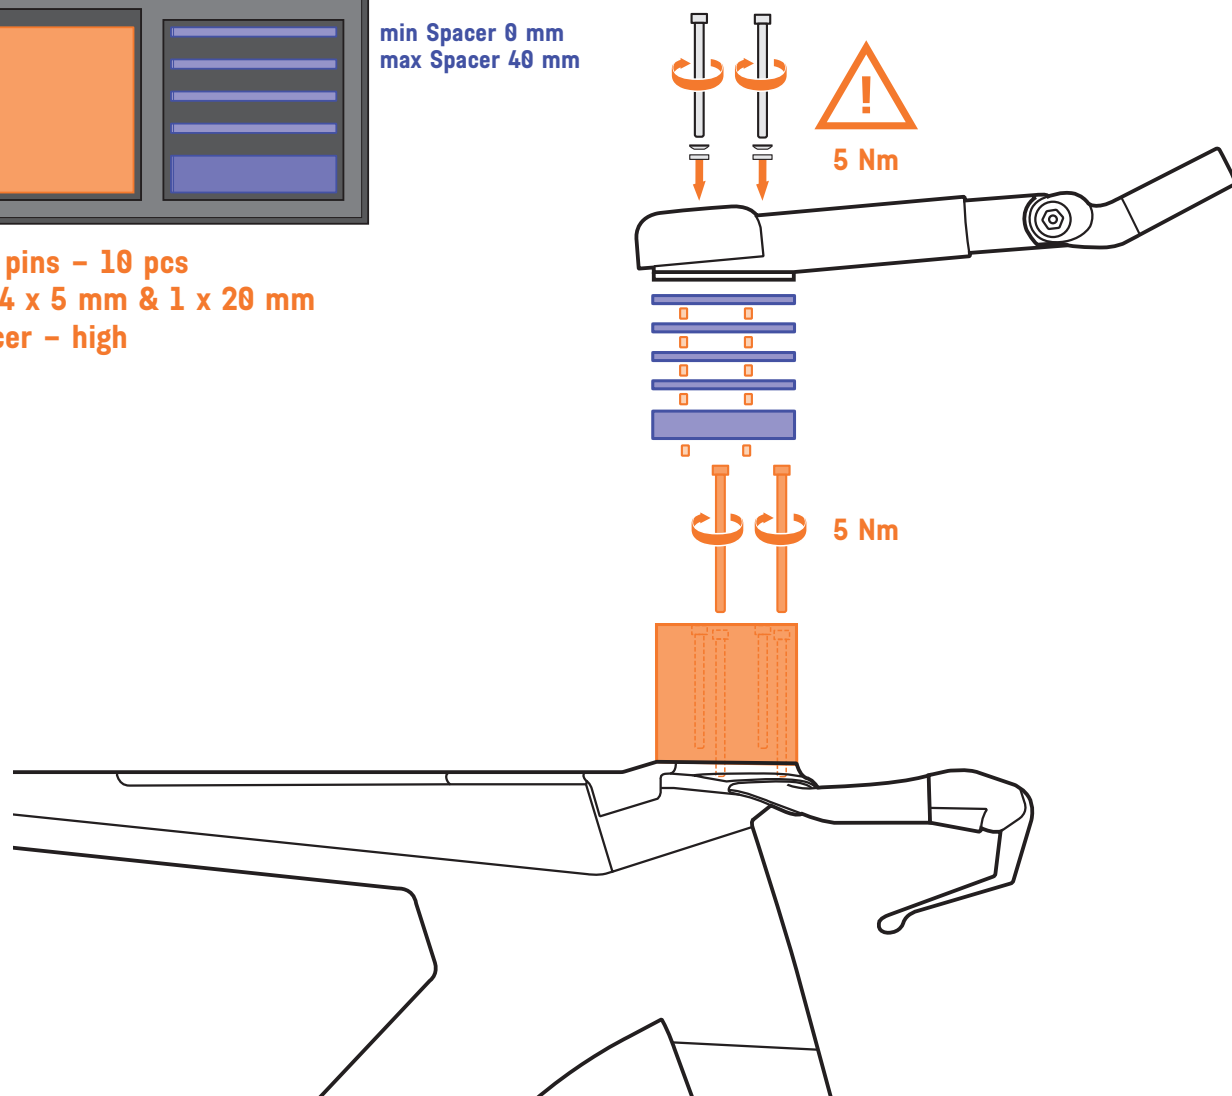


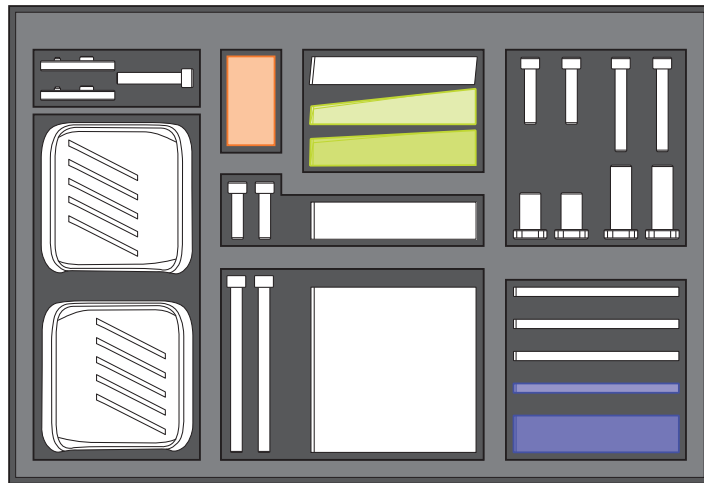


max
25 mm Spacer

1. Assembly pins – 6 pcs
2. Spacer – 1 x 5 mm & 1 x 20 mm
3. Angled Spacer – 3° or 6°


DELIVERY
CONDITION

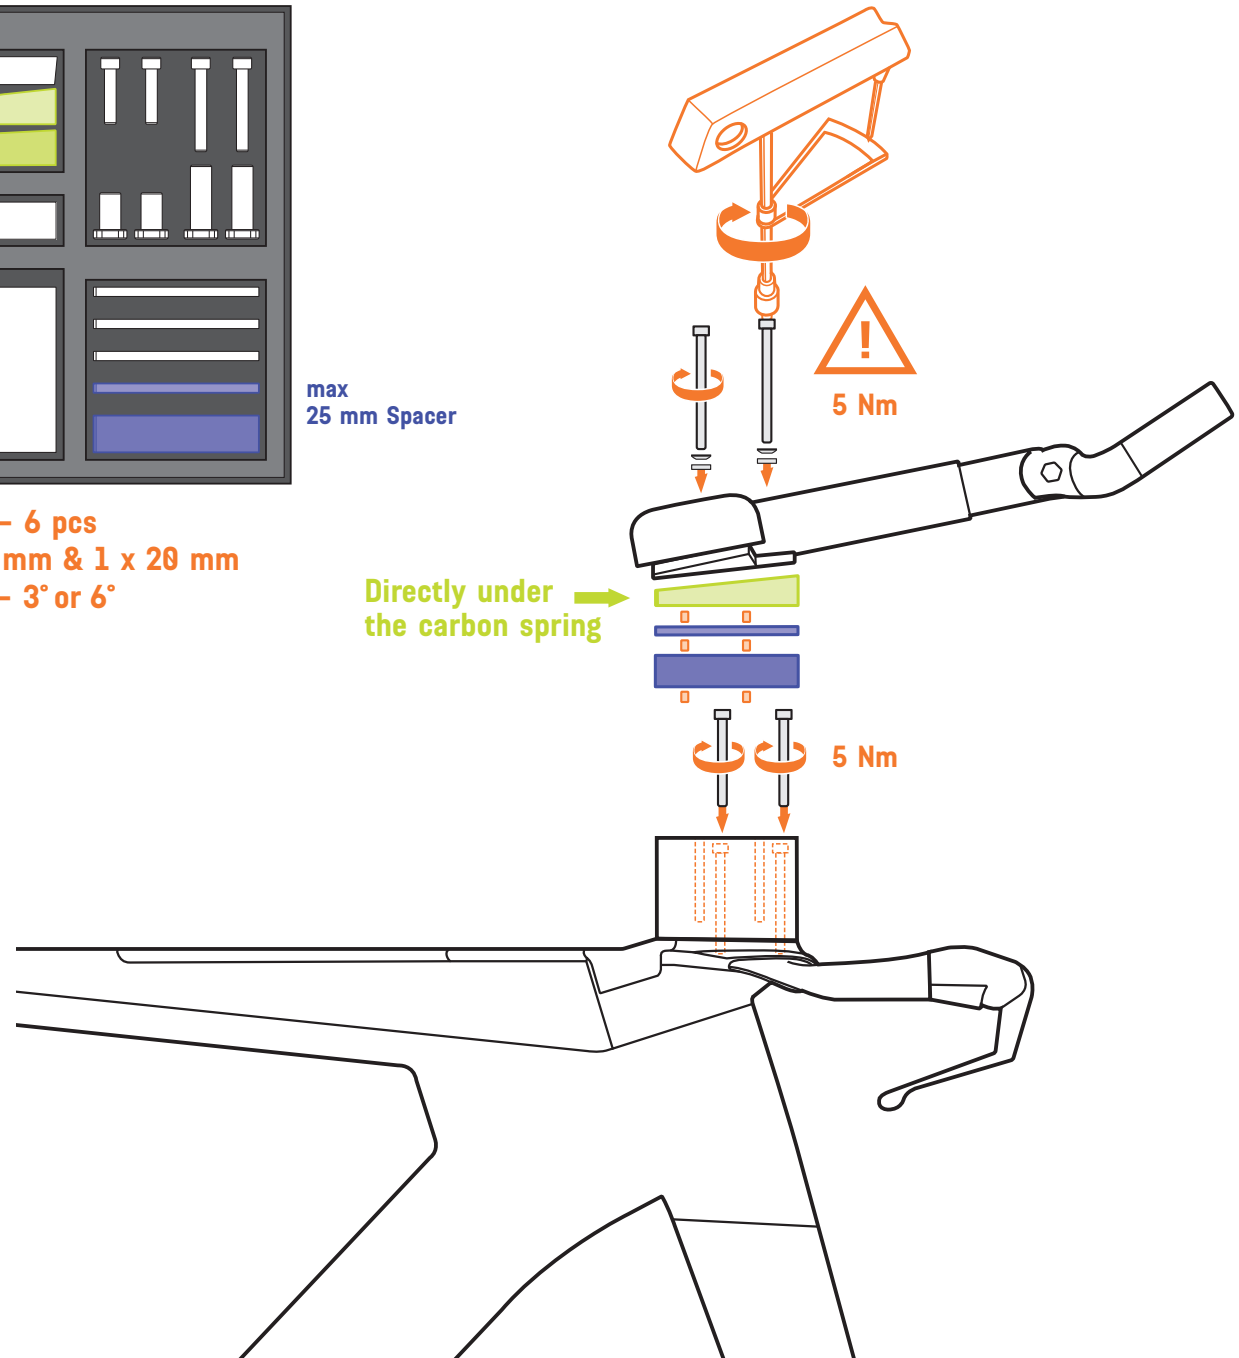

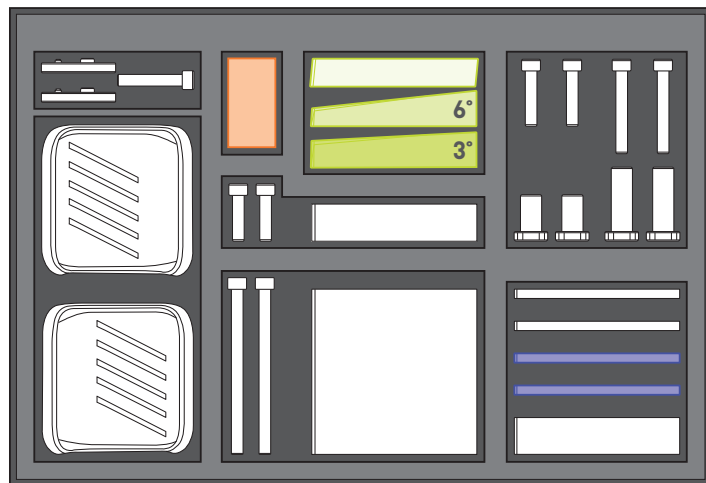



1. Assembly pins – 4 pcs
2. Spacer – 2 x 5 mm
3. Angled Spacer – 3° or 6°

**DELIVERY
CONDITION**




max
10 mm Spacer

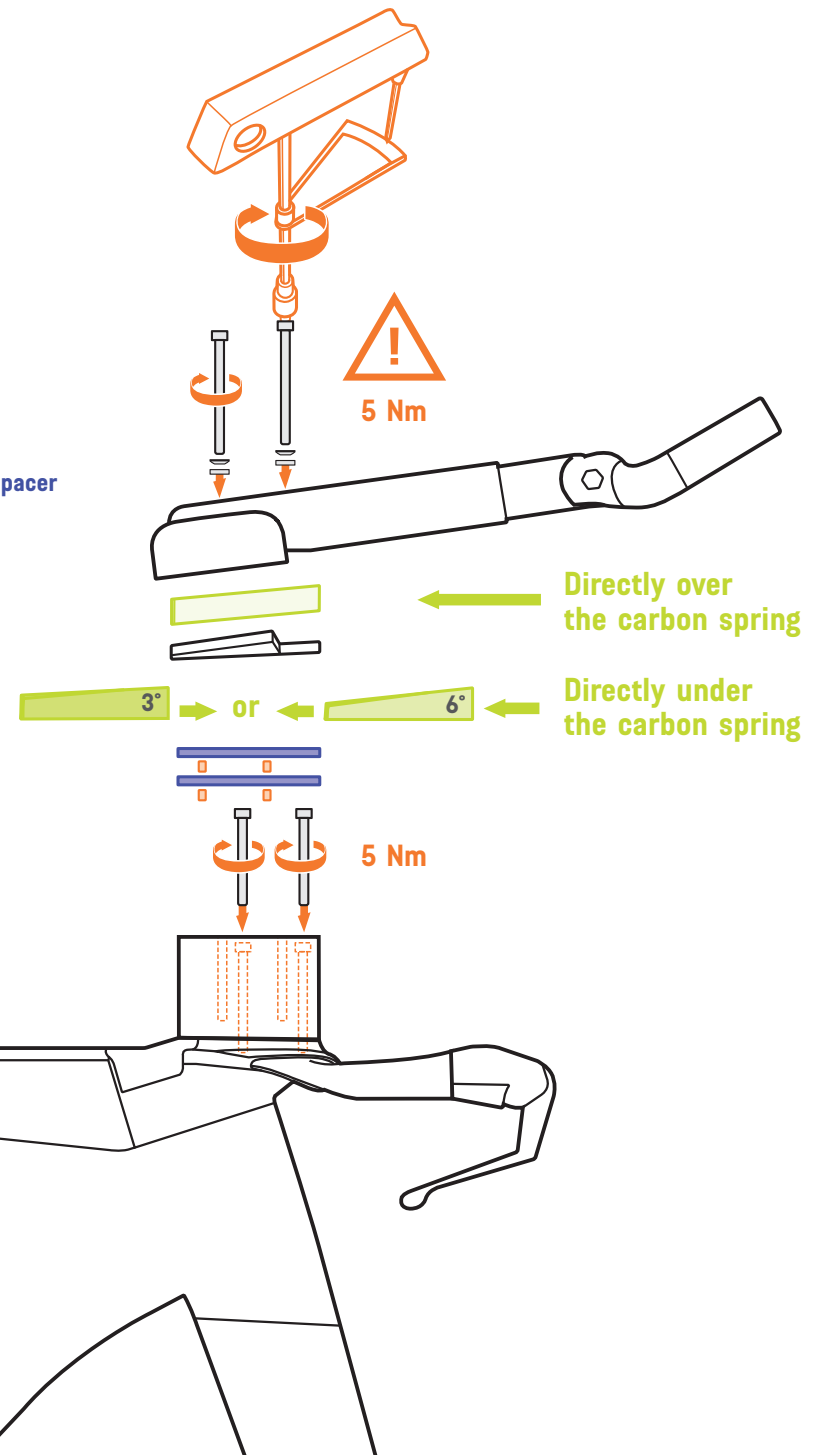

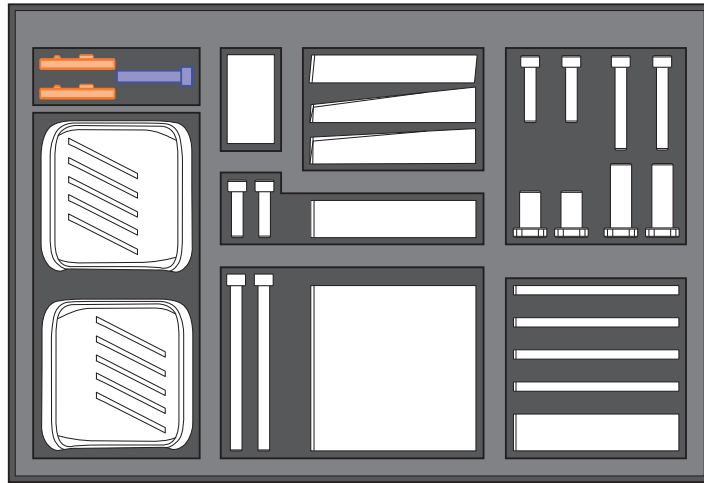


 Grip width adjustment


SMALL BOX INCLUDED

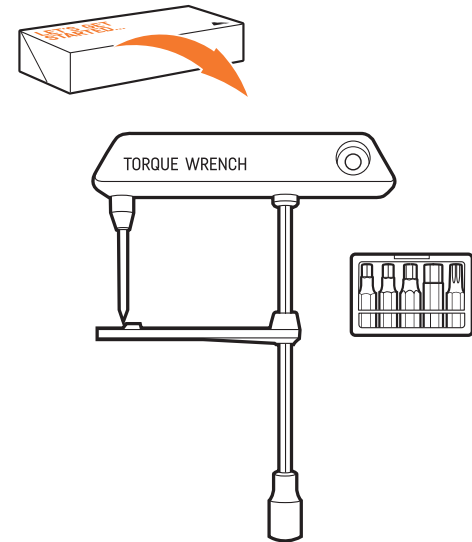


DELIVERY CONDITION

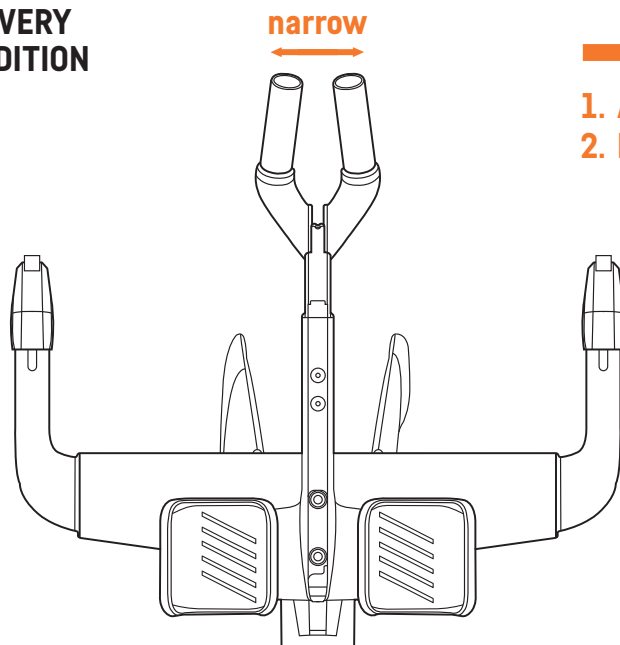



1. Add grip spacer on each side
2. Exchange screw

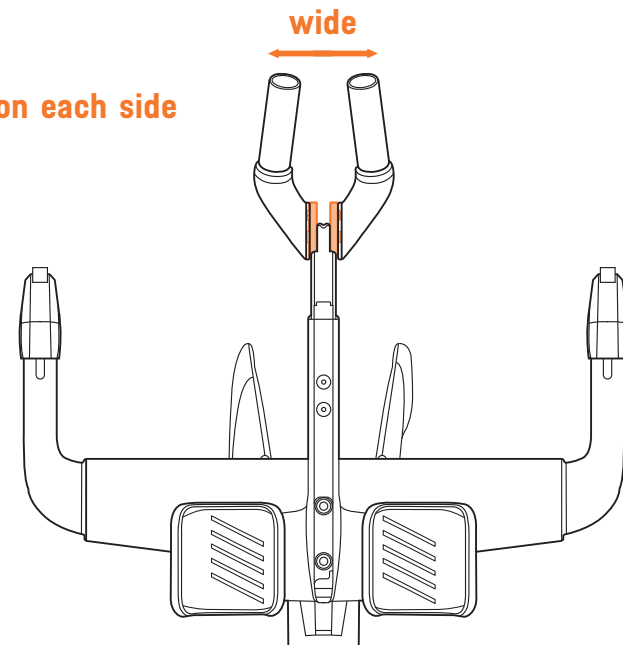


X.1

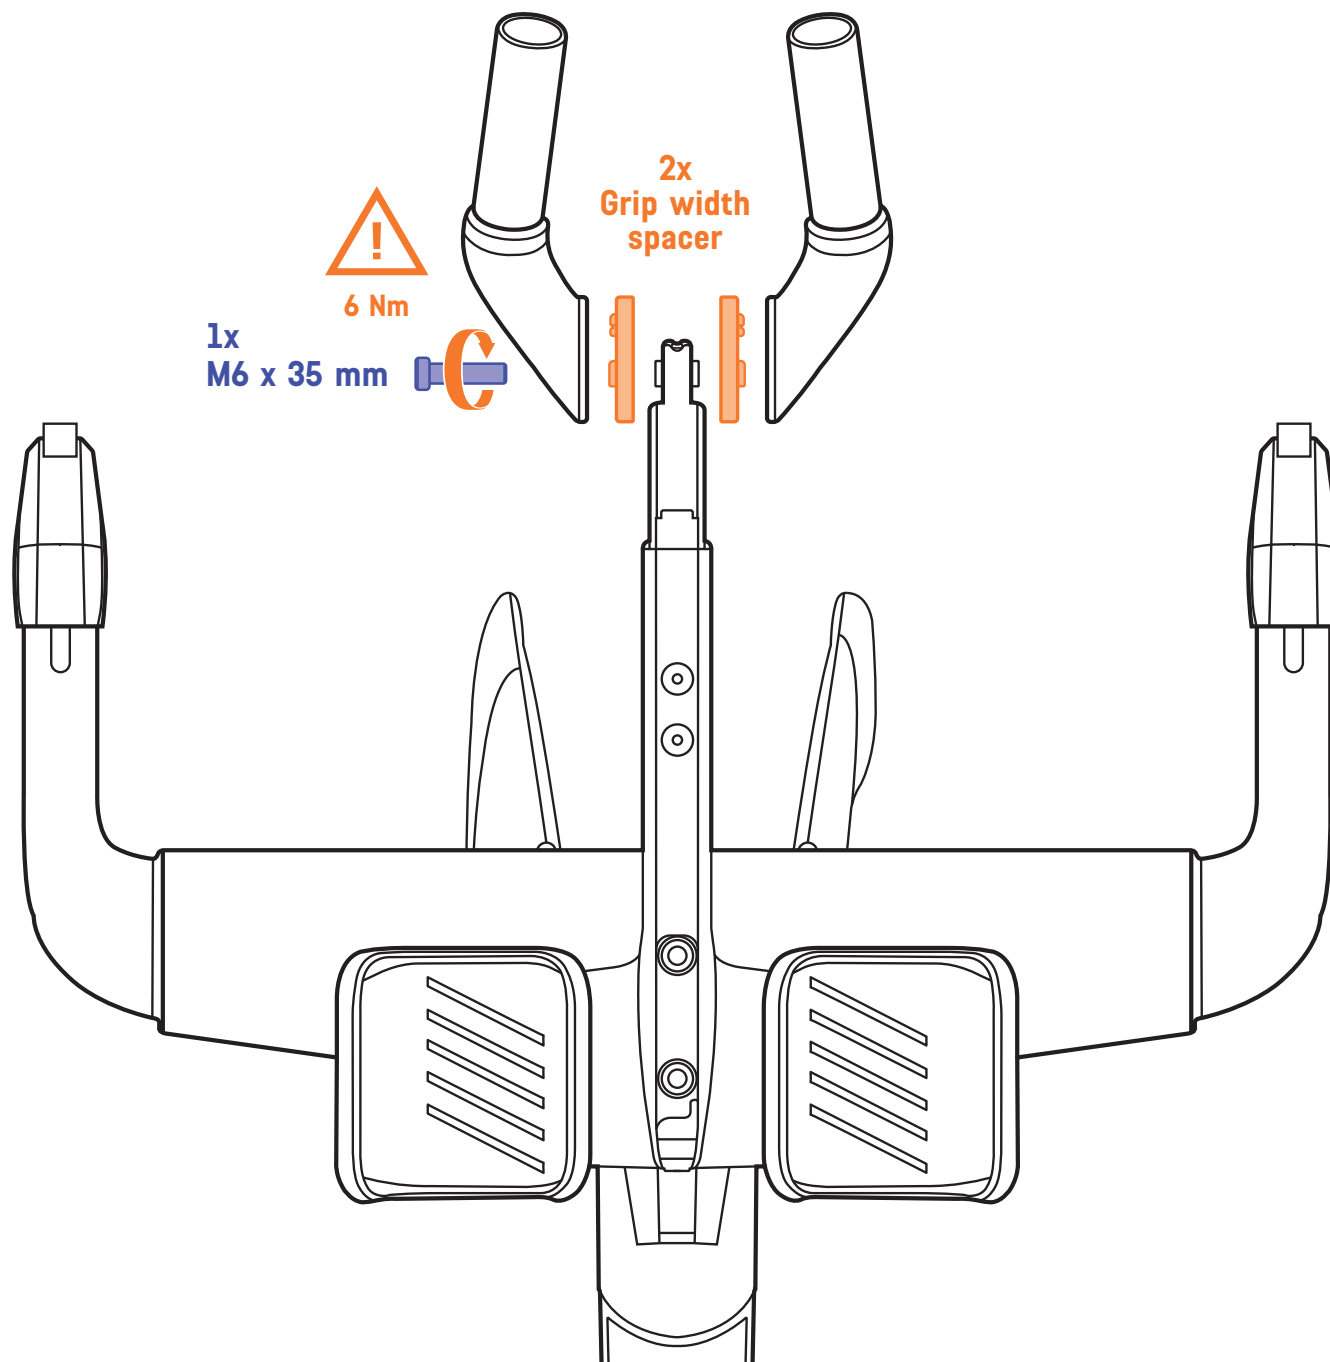

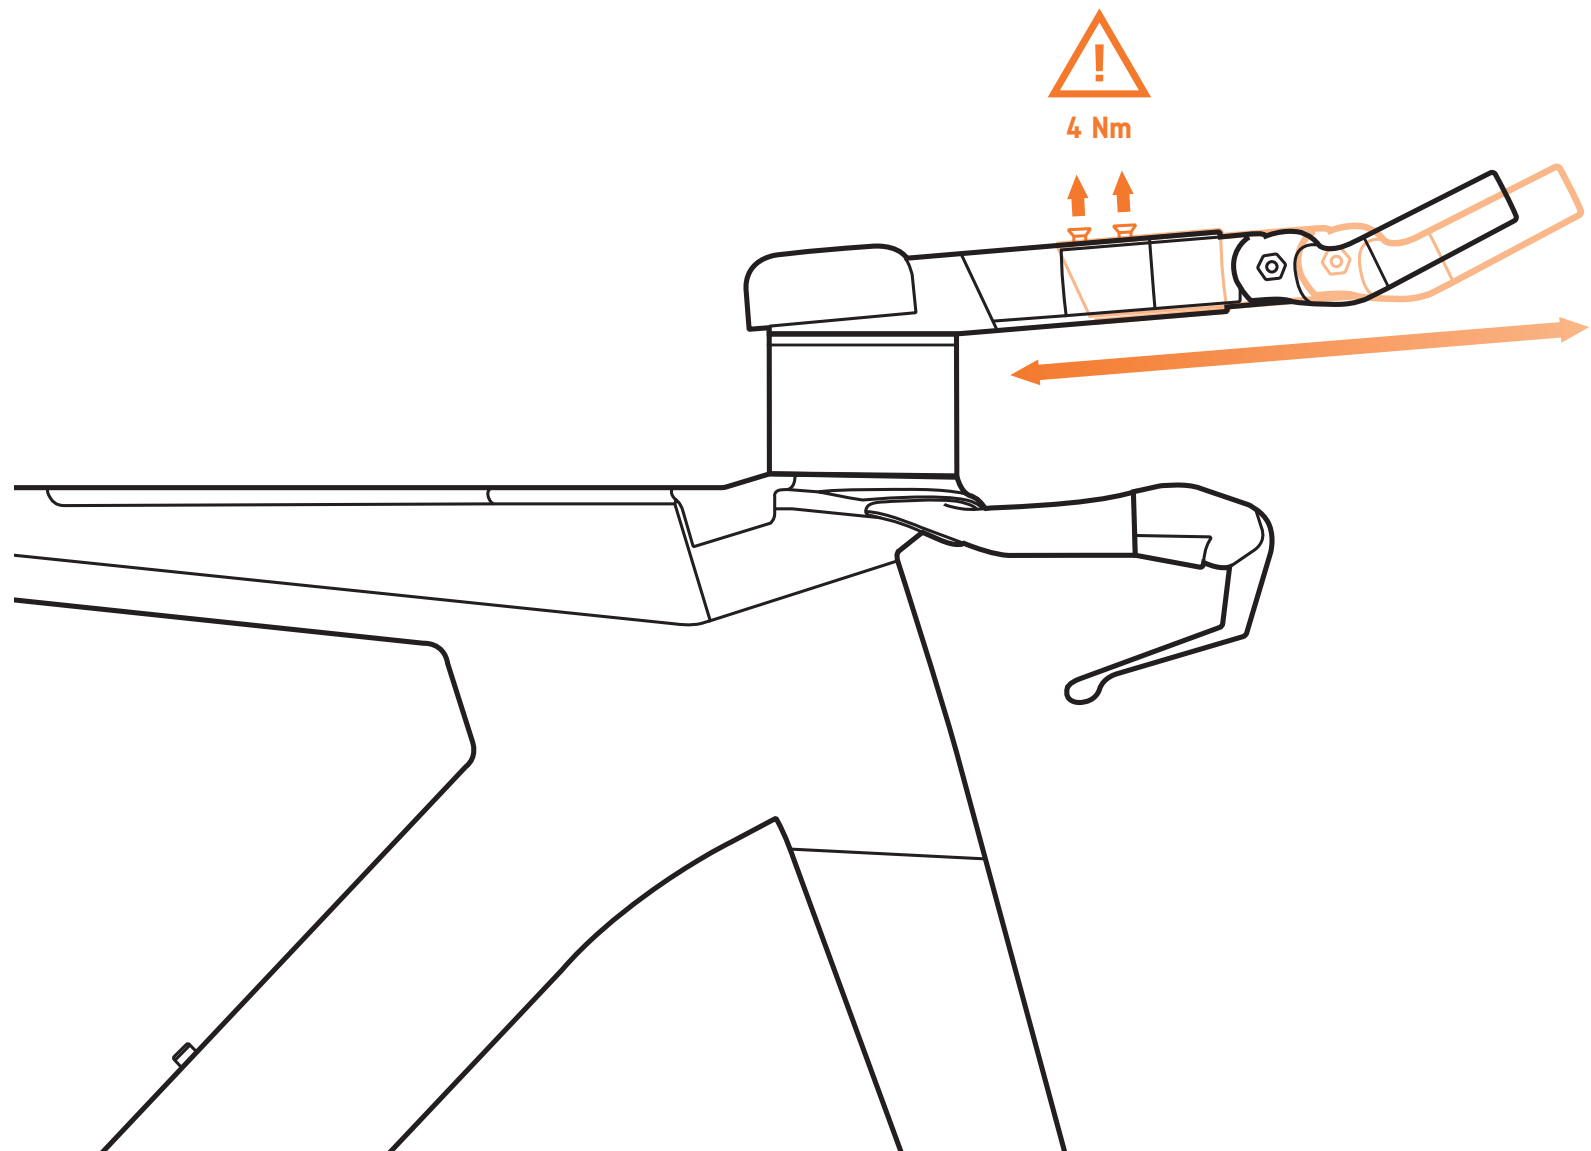


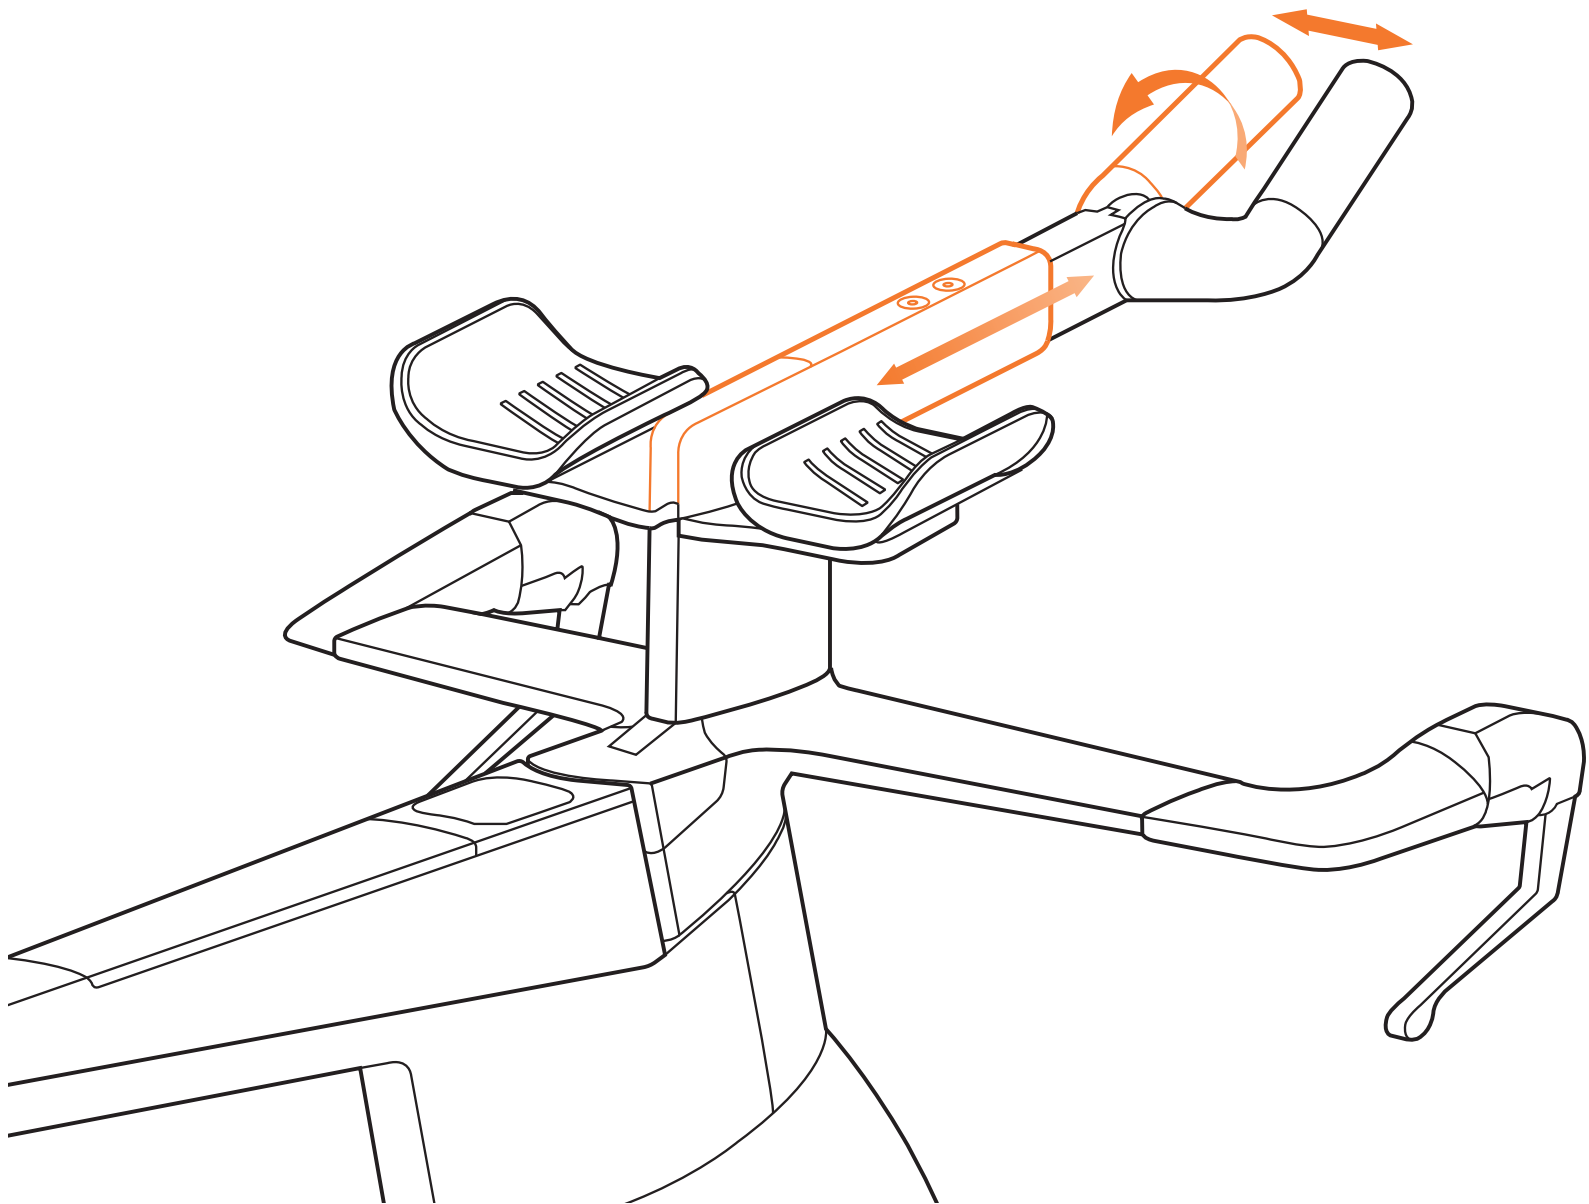



HOW TO MEASURE ARM PAD STACK & REACH / $A-B = \text{Arm pad Stack}$

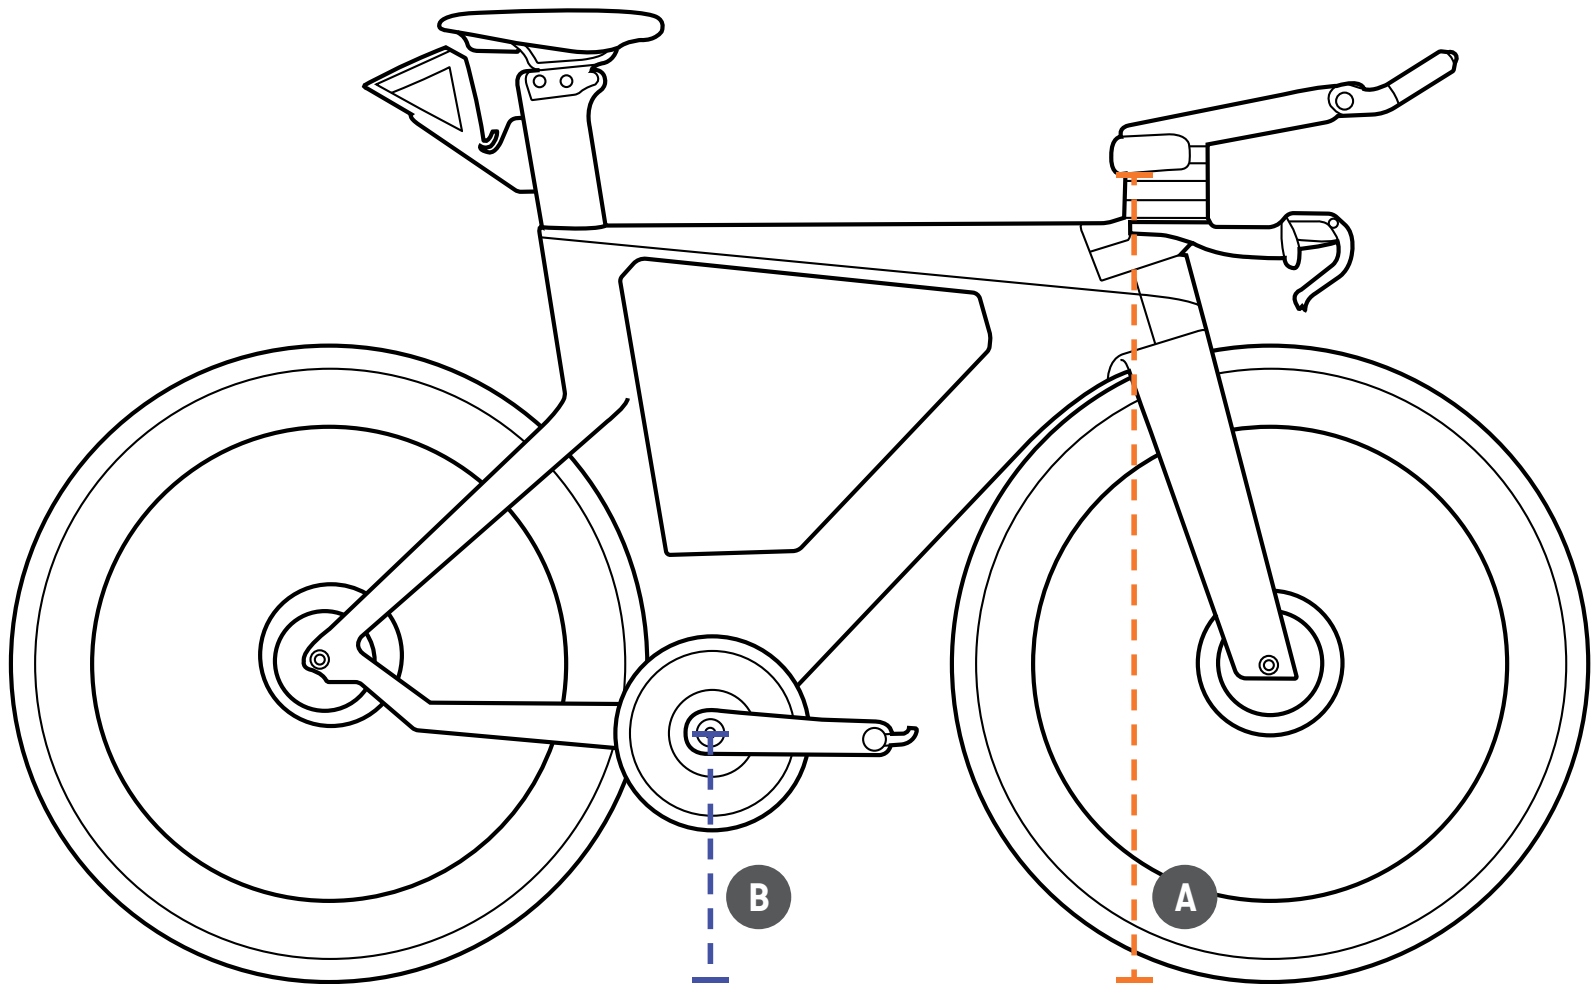

SPEEDMAX ARM PAD STACK OVERVIEW

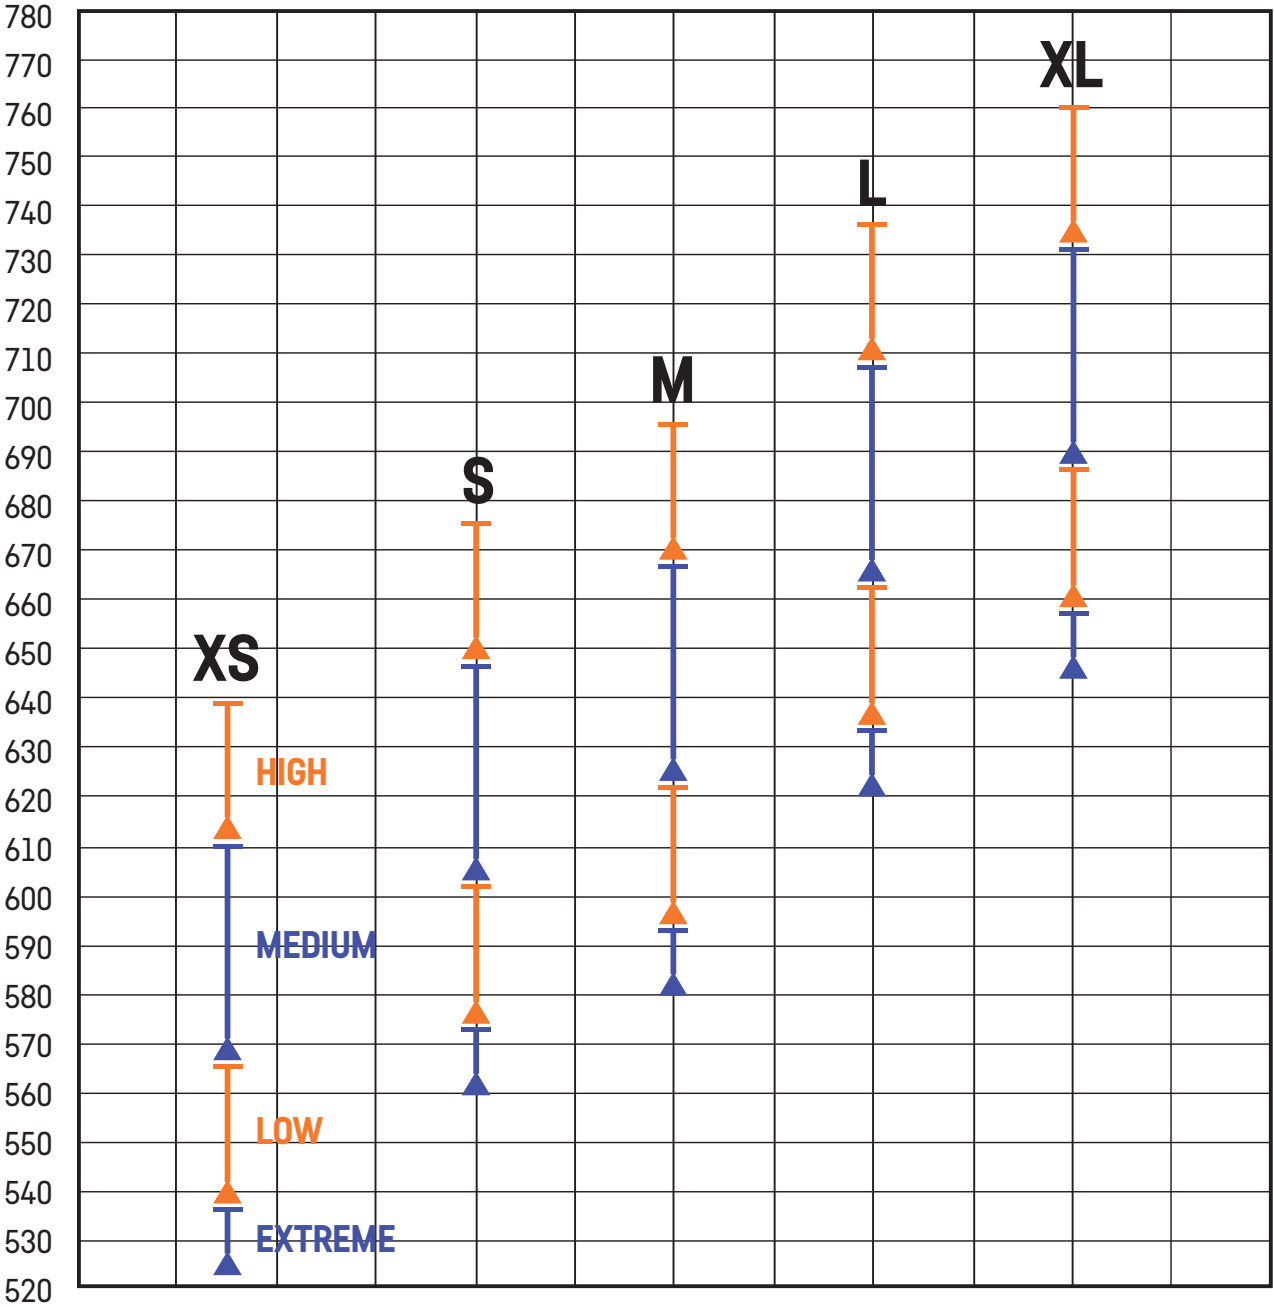

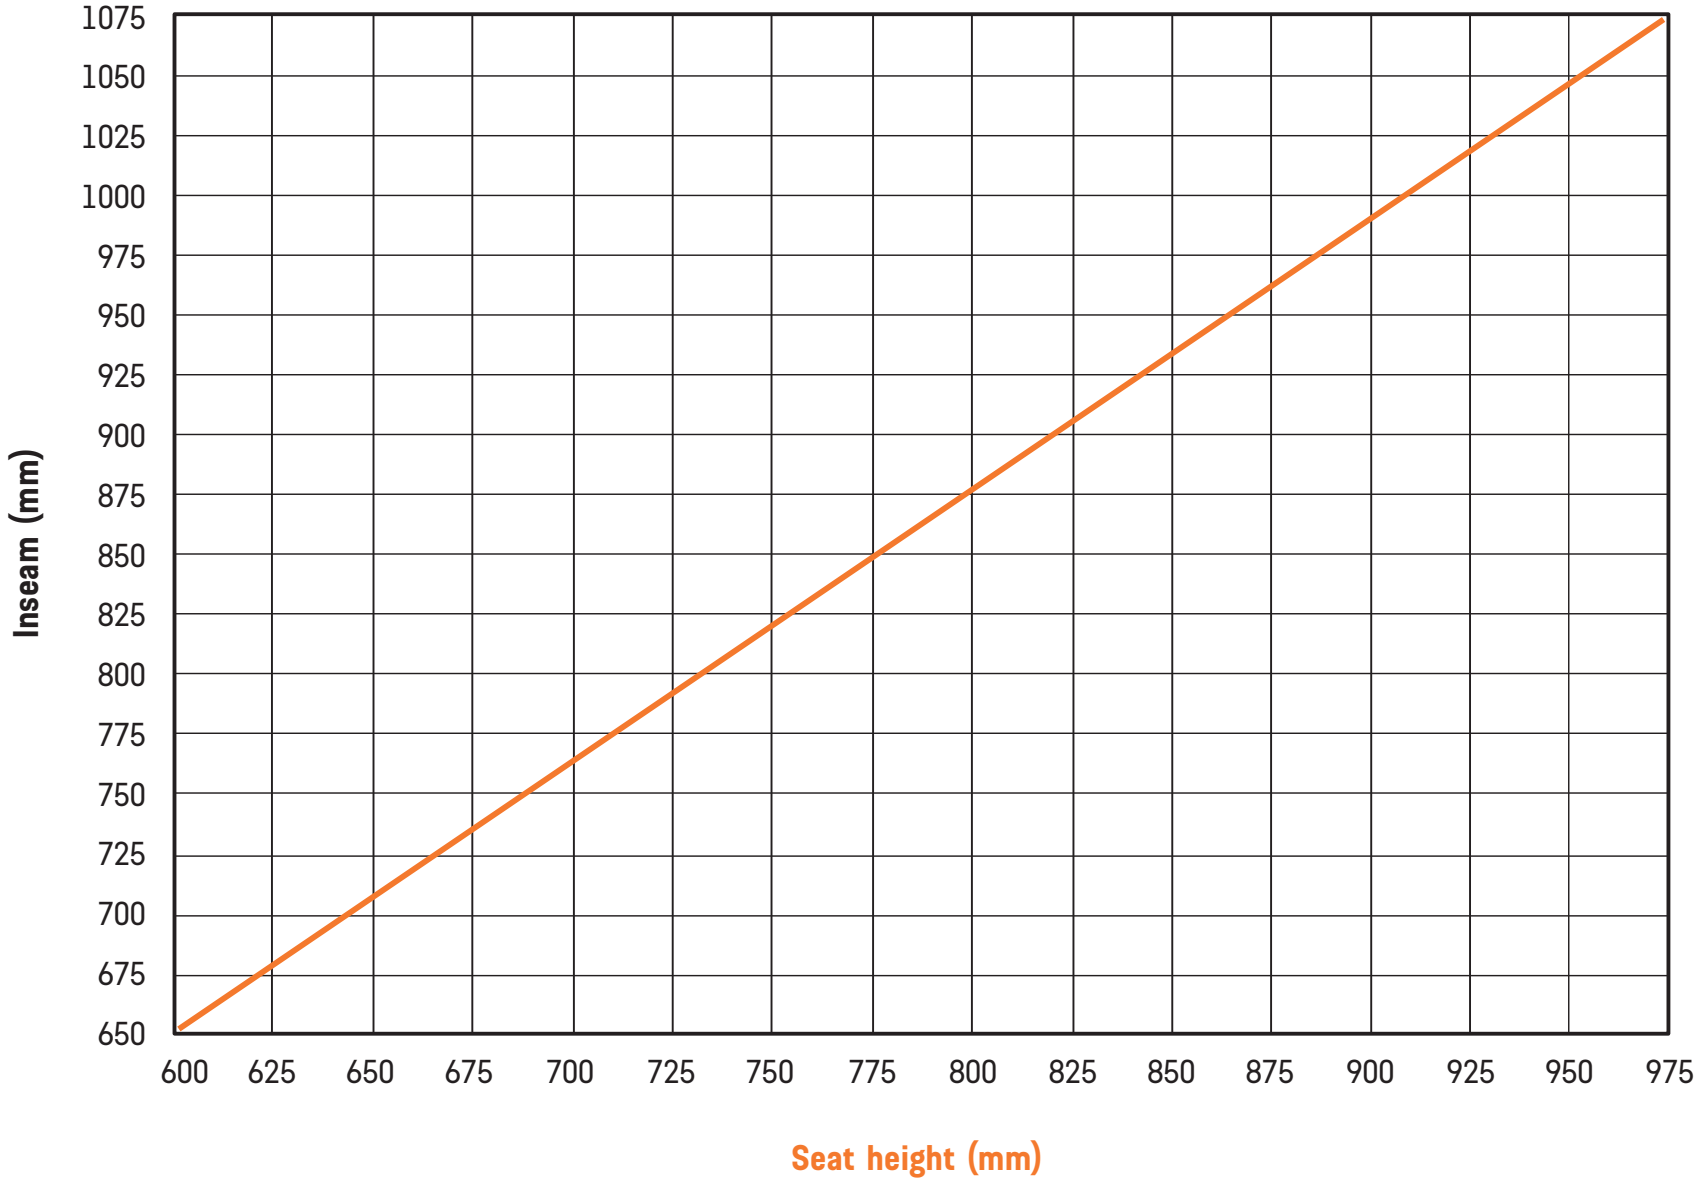

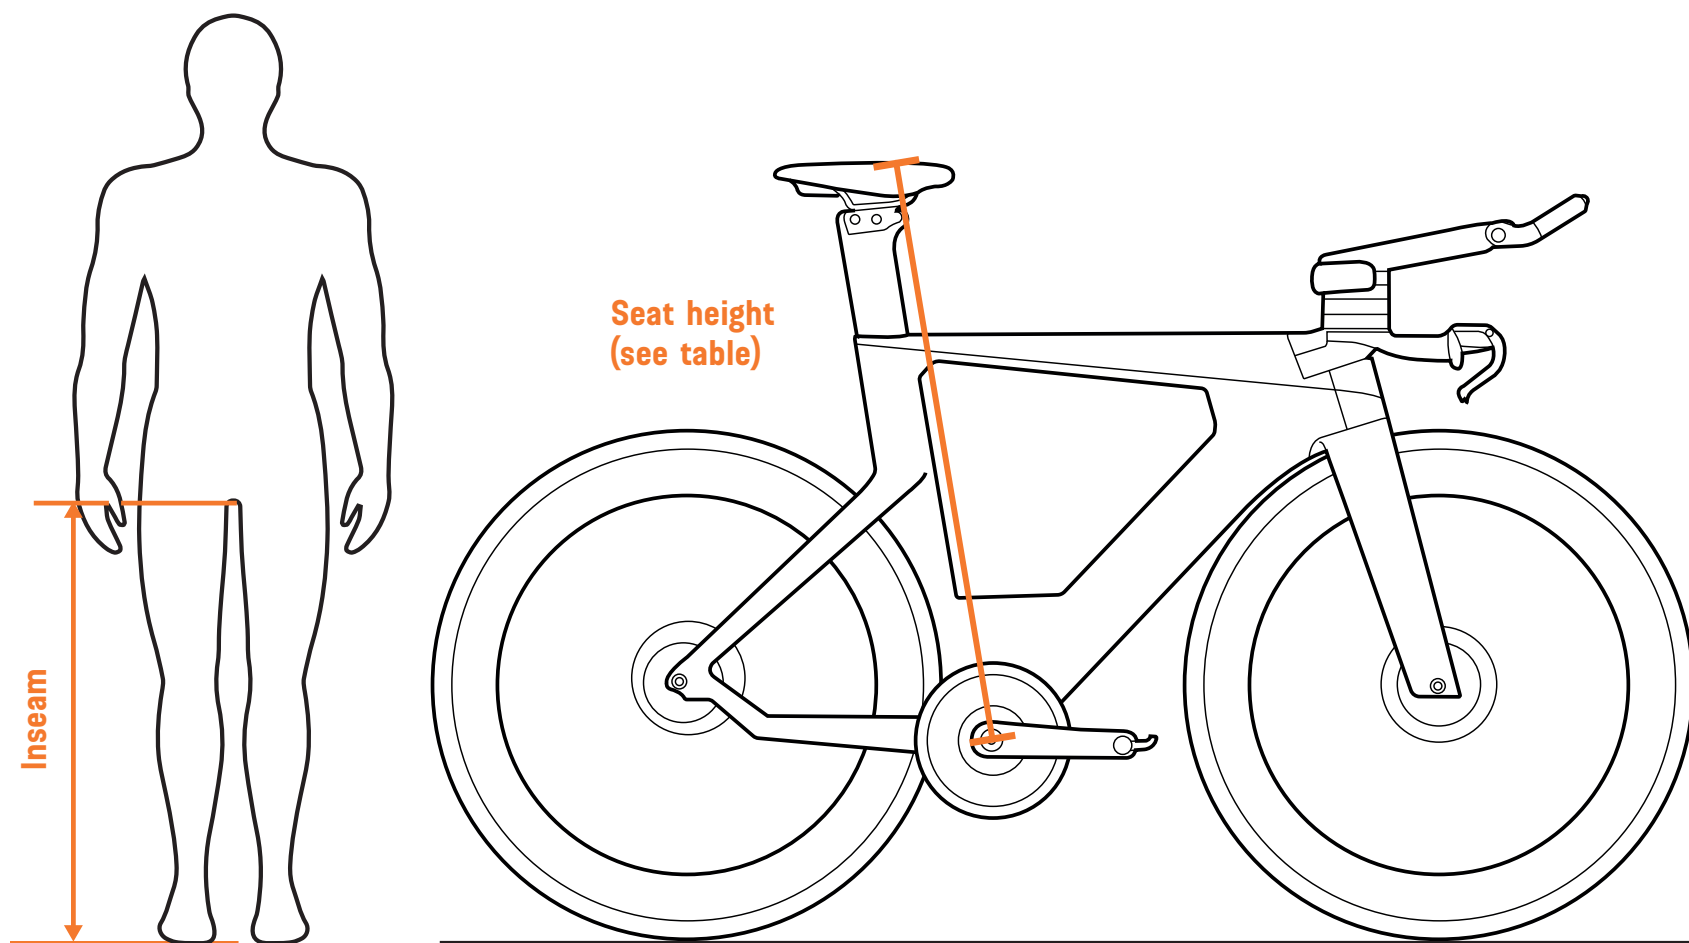

EDITOR / MANUFACTURER:

Canyon Bicycles GmbH
Karl-Tesche-Strasse 12
D-56073 Koblenz

VERSION: 19.02.21